


Accessory Lead for 12 volt socket, Phone charger, Air Pump, Sat Nav or Spot lights. The Alarm plug is fused at 10 Amps so be mindful of any accessory load. Additional inline fuses may be added to individual connected accessories if required.

The White plug just pushes into the existing alarm plug behind the left knee pad above the Glovebox.

To connect your accessory, pull up the individual lever on the Red wire for 12 Volts Positive (Ignition switched), insert 6mm pre stripped cable, then push the lever down to secure (they are quite stiff). Repeat this operation for the Black wire 12 Volts Negative.

The Yellow cable is a permanent live. Connect a 12 Volt Socket inside the Glovebox for phone charging at Rallies, etc so you don't have to have the Ignition switched on.

Diagram depicts cable entry view.

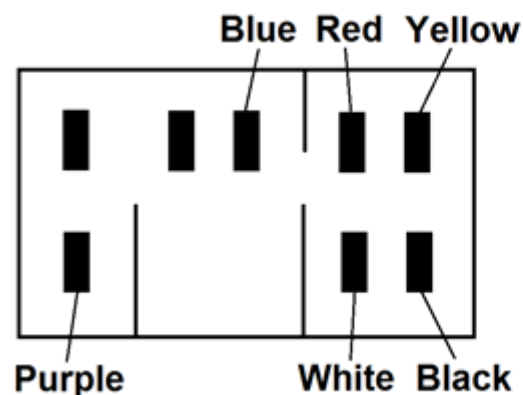

**Blue = Seat Release**  
**Red = Ignition Switched 12v +**  
**Yellow = Permanent 12v +**  
**Purple = Left Indicator**  
**White = Right Indicator**  
**Black = Earth**

**603-1100 – Vespa GTS Scooter Accessory Plug**

**AUTO  
SPARKS**  
*Classic British Quality*